

## Fender (76.10.24)


### Removal

- 1 . Remove the plenum chamber panel.  
For additional information, refer to [Plenum Chamber \(80.15.62\)](#)
- 2 . Remove the front bumper cover.  
For additional information, refer to [Front Bumper Cover \(76.22.72\)](#)
- 3 . Remove the fender splash shield.  
For additional information, refer to [Fender Splash Shield \(76.10.48\)](#)
- 4 . Remove the fender moulding.  
▶ Release the 4 clips.




- 5 . **NOTE:**  
Right-hand shown, left-hand similar.

- Remove the fender air intake grille.
- ▶ Release the 9 clips.
  - ▶ Remove the air ducting.

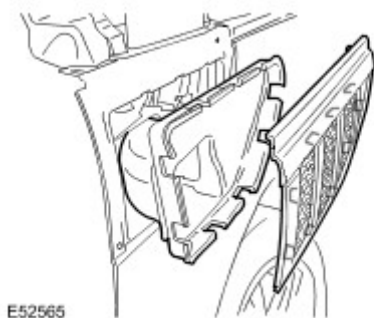


- 6 . Remove the bumper cover clip.  
▶ Remove the 2 bolts.

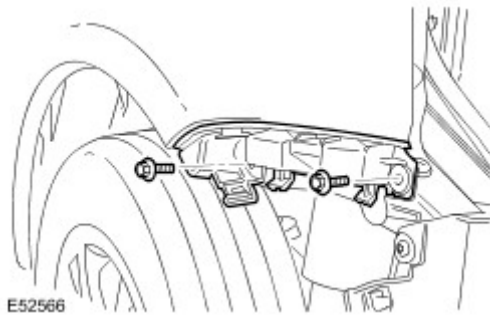

7 . Remove the front fender.

- ▶ Remove the 5 Torx bolts.
- ▶ Remove the nut.

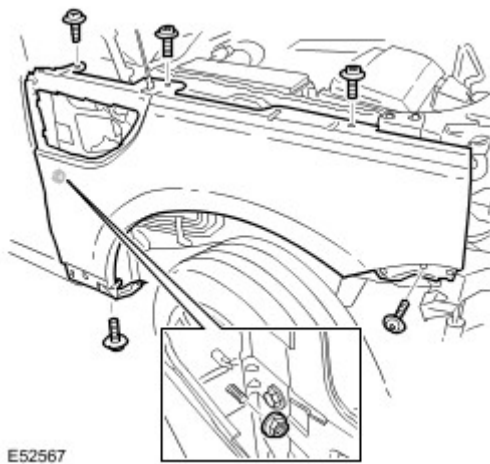

8 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the fender rear trim.

- ▶ Remove the 3 clips.



## Installation

1 . Install the fender rear trim.

- ▶ Secure in the 3 clips.

2 . Install the front fender.

- ▶ Install the bolts and tighten to 10 Nm (7 lb.ft).

- ▶ Install the nut and tighten to 10 Nm (7 lb.ft).
- 3 . Install the front bumper clip.
  - ▶ Install the bolts and tighten to 6 Nm (4 lb.ft).
- 4 . Install the fender air intake grille.
  - ▶ Install the air ducting.
- 5 . Install the fender moulding.
  - ▶ Secure in the clips.
- 6 . Install the fender splash shield.  
For additional information, refer to [Fender Splash Shield \(76.10.48\)](#)
- 7 . Install the front bumper cover.  
For additional information, refer to [Front Bumper Cover \(76.22.72\)](#)
- 8 . Install the plenum chamber panel.  
For additional information, refer to [Plenum Chamber \(80.15.62\)](#)