

## Headlamp Adjustment (86.40.17)

**NOTE:**

With self leveling suspension, make sure the vehicle is at the standard ride height.

**NOTE:**

The headlamp setting is 1.2 % below horizontal and parallel.

**NOTE:**

NAS vehicles have vertical adjustment only.

1. Align the headlamp beam setting equipment to one headlamp.


2. Switch the headlamps on and to dipped beam.

3. **NOTE:**

NAS vehicles have vertical adjustment only.

Adjust the headlamps with a Philips screwdriver.

- Rotate the adjusters A and B by an equal amount for vertical alignment.
- Rotate the adjusters A or B for horizontal alignment.

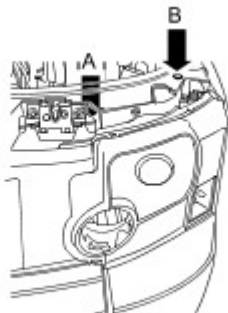

E49808

4. To adjust the second headlamp, repeat the above procedure.