

Navigation System Display Module

Removal


1



CAUTION: After switching of the ignition, wait for 2 minutes before disconnecting the battery. Failure to wait for 2 minutes will damage the navigation computer. Disconnect the battery ground cable.


2 . Remove the audio unit side trim panels.

- * Release the 6 clips.

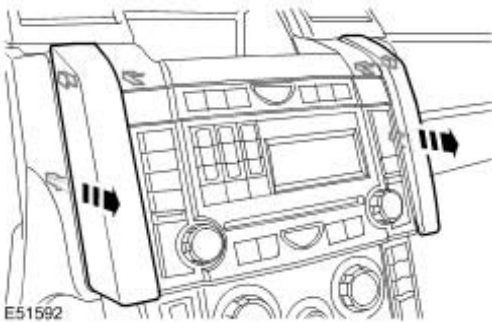


3 . Remove the instrument panel center reinforcement trim panel.

- * Release the 3 clips.
- * Repeat the above procedure for the other side.

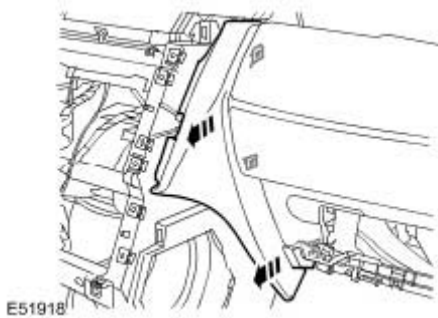

4 . Remove the center face level vent.

- * Remove the 2 Torx screws.
- * Repeat the above procedure for the other side.

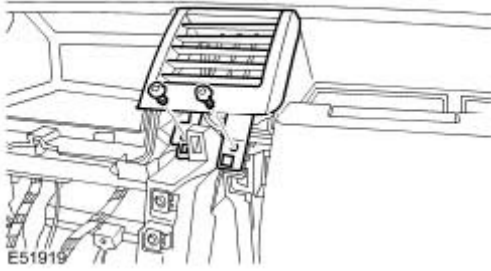

5 .
 **CAUTION:** Cover fibre optic cable connectors to minimise dust ingress and avoid bending the cables in a radius of less than 30 mm.

Remove the navigation system display module.

- * Remove the 4 screws.
- * Disconnect the fibre optic connector.
- * Disconnect the 2 electrical connectors.

