

Upper Arm Ball Joint (60.15.02)

Special Service Tools

204-530-3



E50157

Ball joint remover/installer
204-530-3

204-530-2



E50156

Ball joint remover/installer
204-530-2


204-530-1



E50155

Ball joint remover/installer
204-530-1

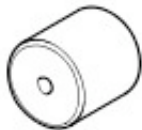

204-516/3




E50961

Ball joint remover/installer
204-516/3 (LRT-64-026/3)


Removal

- 1 . Remove the upper arm.
For additional information, refer to [Upper Arm \(60.35.01\)](#)
- 2 . Remove the dust seal.
 -  Remove the seal retainer.
 -  Remove the circlip.


3 . Using the special tools, remove the ball joint.

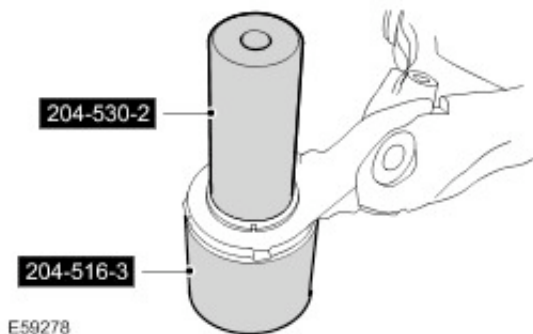

Installation

1 .  **CAUTION: Make sure the timing marks are aligned.**

Using the special tools, install the ball joint.

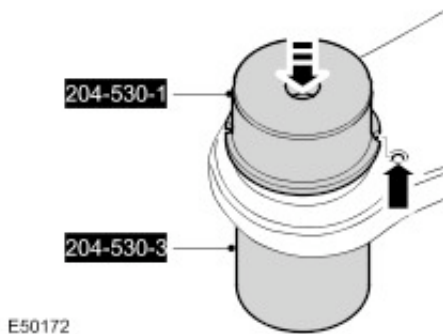

2 .  **CAUTION: Circlip holes to be 90 degrees rotated from timing marks.**

Install the circlip.



3 . Install the upper arm.
For additional information, refer to [Upper Arm \(60.35.01\)](#)