Published: Jan 5, 2005

Rear Stabilizer Bar (64.35.08)

Removal

CAUTION: It is possible to install the stabilizer bar incorrectly. Note the position of the stabilizer bar before removal.


WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.

- 2 . Remove the rear bumper cover.


 For additional information, refer to Rear Bumper Cover (76.22.74)
- 3. Remove the spare wheel and tire.
- 4. Raise the vehicle.
- 5. Remove the rear wheels and tires.
- 6. CAUTION: Use a wrench on the hexagon provided to prevent the ball joint rotating.


Release both stabilizer bar links.

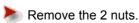

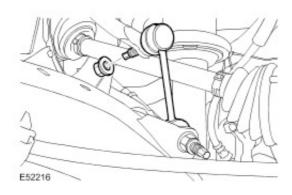

7 . Remove the body mount retaining bolts.

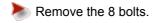

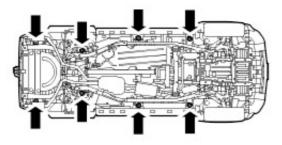

E52217

8.




CAUTION: Only raise the body sufficiently to remove the body mount.


Raise the body.

Using suitable stands, raise the body to release the body mounts.

9 . Remove the 2 rear body mounts.

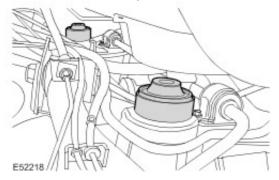

- 10 . Remove the stabilizer bar bushing.
 - Remove the stabilizer bar clamps.
 - Remove the 4 bolts.

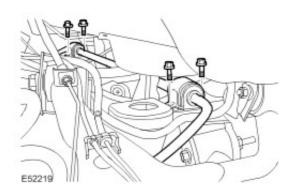


11.



CAUTION: Mark the position of the stabilizer bar.

Remove the stabilizer bar.

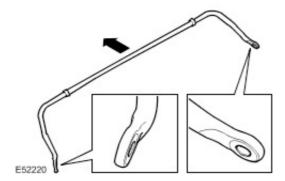

Installation

1.



CAUTION: Make sure the stabilizer bar is correctly installed.

Install the stabilizer bar.

- 2. Install the stabilizer bar bushing.
- 3 . Install the stabilizer bar clamps.
 - Tighten the 4 retaining bolts to 62 Nm (46 lb.ft).
- 4. Install the body mounts.
- 5. Lower the body.
- Remove the stands.
- 6 . Install the body mount retaining bolts.
 - Tighten the 8 retaining bolts to 133 Nm (98 lb.ft).
- 7. Attach both stabilizer bar links.
 - Tighten the nuts to 115 Nm (85 lb.ft).
- 8. Install the wheels and tires.
- 9. Lower the vehicle.
- 10. Install the spare wheel and tire.
- 11 . Install the rear bumper cover.

 For additional information, refer to Rear Bumper Cover (76.22.74)