


Air Suspension Muffler (64.50.01)



Removal


- 1 .  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

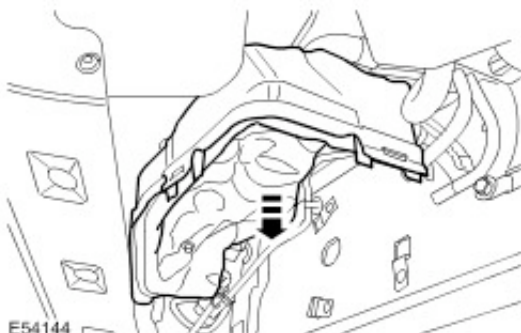- 2 . Remove the muffler assembly.
For additional information, refer to [Muffler \(30.10.11\)](#)
- 3 . Remove the evaporative emissions canister.
For additional information, refer to [Evaporative Emission Canister \(17.15.13\)](#)
- 4 . Remove the air suspension compressor.
For additional information, refer to [Air Suspension Compressor \(60.50.10\)](#)
- 5 . Remove the air suspension compressor upper cover.




- 6 . Disconnect the air suspension intake filter pipe.
- 7 . Remove the air suspension muffler.
 -  Release clip from the air suspension muffler pipe.
 -  Release the air suspension compressor to air suspension silencer pipes.

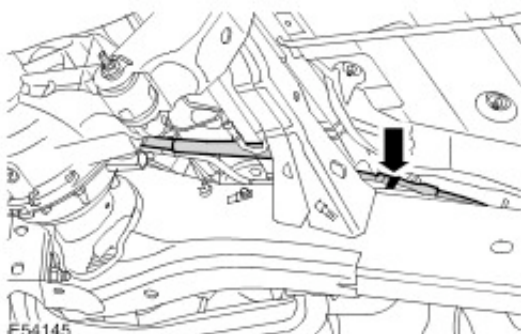

Installation

1 . Install the air suspension muffler.

 Locate the air suspension muffler pipes.

 Secure the clip.

2 . Connect the air suspension intake filter.

3 .



CAUTION: Make sure the air suspension compressor upper cover is correctly positioned.

Install the air suspension compressor upper cover.

4 . Install the air suspension compressor.

For additional information, refer to [Air Suspension Compressor \(60.50.10\)](#)

5 . Install the evaporative emissions canister.

For additional information, refer to [Evaporative Emission Canister \(17.15.13\)](#)

6 . Install the muffler assembly.

For additional information, refer to [Muffler \(30.10.11\)](#)