




Ride and Handling Optimization Switch (86.65.11)


Removal

- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)
- 2 . Remove the selector lever knob.
For additional information, refer to [Selector Lever Knob \(44.15.07\)](#)
- 3 . Remove the ride and handling optimization switch.
 -  Release the 6 clips.
 -  Disconnect the 4 electrical connectors.

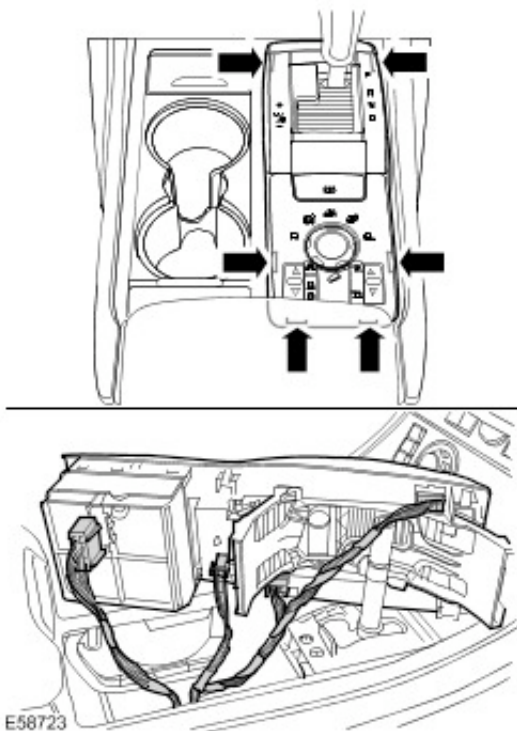


- 4 . **NOTE:**
Do not disassemble further if the component is removed for access only.


Remove the screw cover.

-  Release the clip.

- 5 . Remove the parking brake switch.
 -  Remove the 2 screws.

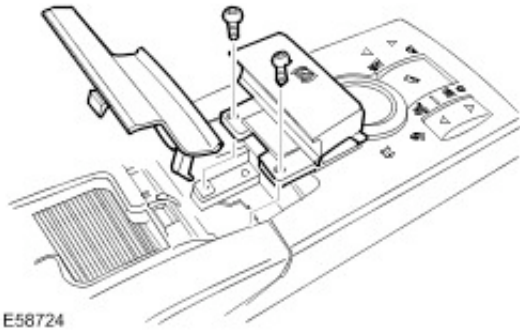

- 6 . Remove the selector lever panel.
▶ Release the 4 clips.

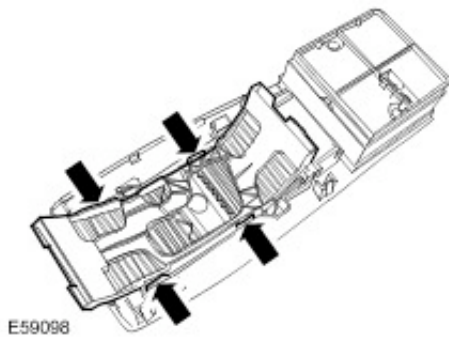

Installation

- 1 . Install the selector lever panel.
▶ Secure the clips.
- 2 . Install the parking brake switch.
▶ Tighten the screws.
- 3 . Install the screw cover.
- 4 . Install the ride and handling optimization switch.
▶ Connect the electrical connectors.
▶ Secure the clips.
- 5 . Install the selector lever knob.
For additional information, refer to [Selector Lever Knob \(44.15.07\)](#)
- 6 . Connect the battery ground cable.
For additional information, refer to [Specifications](#)