

Lower Accelerometer (60.60.03)


Special Service Tools




Accelerometer remover/replacer
204-505 (LRT-60-014A)

Removal



- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)


- 2  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.


- 3  **CAUTION: The accelerometer is an extremely delicate component and can easily be rendered unserviceable. Never use an accelerometer which has been dropped or subjected to mistreatment of any type.**

Remove the lower accelerometer.

-  Using the special tool , release the accelerometer.
-  Release and disconnect the electrical connector.

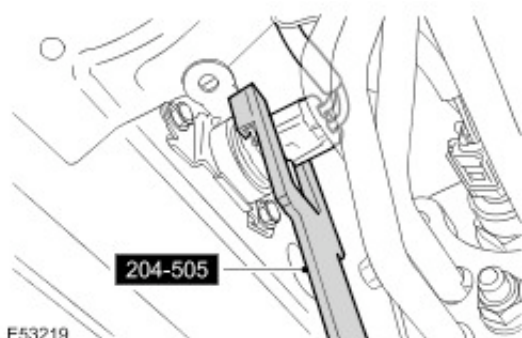

Installation

- 1 . Using the special tool, install the lower accelerometer.
 -  Connect and secure the electrical connector.

- 2 . Connect the battery ground cable.
For additional information, refer to [Specifications](#)

- 3 . Using T4, calibrate the dynamic response system.