


# Door Lock Cylinder (76.37.39)

## Removal

1 . Remove the front door lock cylinder cover.

▶ Use the ignition key.

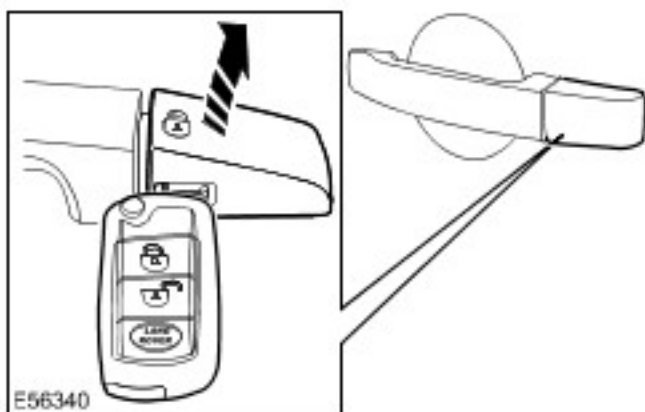

2 . **NOTE:**

The Torx screw remains in the door lock housing.

Remove the front door lock cylinder.

▶ Open the door.

▶ Remove the access plug.

▶ Loosen the Torx screw to release the lock.



# Installation

- 1 . To install, reverse the removal procedure.